



- |                           |                                 |
|---------------------------|---------------------------------|
| 0001 VALVE BODY           | 0024 BUMPER                     |
| 0002 VALVE SPRING         | 0025 SEAR SPRING                |
| 0003 EXHAUST VALVE        | 0026 MAIN SPRING                |
| 0004 VALVE GUIDE          | 0027 SPRING GUIDE               |
| 0005 O RING-VALVE GUIDE   | 0028 VELOCITY ADJ.BODY          |
| 0006 O RING-VALVE GUIDE   | 0029 VELOCITY ADJ.INSERT        |
| 0007 RETAINER SCREW       | 0030 O RING-VEL ADJ. INSERT     |
| 0008 SPLIT WASHER         | 0032 BOLT PLUNGER               |
| 0009 TRIGGER              | 0034 COCKING HANDLE             |
| 0010 SAFETY CATCH         | 0035 BALL RETAINER              |
| 0011 SAFETY BALL          | 0036 COVER PLATE-BALL RETAINER  |
| 0012 SAFETY SPRING        | 0037 SPLIT WASHER-SMALL         |
| 0013 FRAME SCREW-FRONT    | 0038 RETAINER SCREW-COVER PLATE |
| 0014 DOWEL PIN 1/8        | 0039 BARREL                     |
| 0015 FRAME SCREW-REAR     | 0040 TRIGGER SPRING             |
| 0016 SEAR                 | 0041 BODY-RIGHT/HAND FEED       |
| 0017 GRIP                 | 0043 GRIP FRAME                 |
| 0018 BOTTOM LINE          | 0044 FLAT WASHER                |
| 0019 HOSE HI-PRESSURE     | 0045 LONG BOLT                  |
| 0020 ELBOW                | 0080 RAIN COVER                 |
| 0021 GRIP RETAINING SCREW | 0171 CENTRE FEED BODY           |
| 0022 O RING-HAMMER        | 0242 O-RING RAIN COVER          |
| 0023 HAMMER               |                                 |